



continu.us

Need Help?

Contact us at:

1-855-423-2181

Support@continus.us

Model: DT-R08C

SM.1490447CE000

Confirm first

Your DT-R08C remote control has two fresh AAA batteries Properly installed.

To use the learning mode, you will need another remote that currently works with your TV. Ensure that it has working batteries—If programming the DT-R08C to work with a cable box, you will also need the original working cable-box remote.

Quick Search

The fast search function will search through common TV remote codes incrementally as you press the **'CH+'** button. This method of programming your remote will not work with all TVs.

1. Ensure that your TV is powered on.
2. Press and hold the **'Mute'** and **'CH+'** buttons for five seconds. The indicator light next to the **'Power'** button will turn on. Release both buttons.
3. Press the **'CH+'** button. Each time you press it, it will cycle to the next TV remote code and the LED indicator will flash.

NOTE: You can also press 'CH-' to browse for non RCA Commercial/Continu.us codes

4. When the channel on your TV changes, you have reached the correct code. Press the 'Mute' button to save the setting.
5. Verify that all buttons are performing their desired function-if they are not, repeat steps NOTE: You can also press 'CH-' to browse for non RCA Commercial/Continu.us codes

Note: If you cannot find a code that works, please follow the 'learning mode' settings below.

Learning Mode

The DT-R80C has the ability to learn functions from other remotes. If using the EasyMote to control more than one device, such as a TV and a Cable Box, you will need both devices original remotes to learn the commands.

1. Find the remote that works with your TV. Test it to make sure it currently is operational with your TV.
2. Press and hold the **'Mute'** and **'VOL+'** buttons until the indicator light next to the **'Power'** button illuminates.
3. Point the front of the DT-R08C at the front of your teaching remote. Keep both remotes within 2-3 cm of each other.
4. Press the desired function key on the teaching remote you wish to learn. The indicator light on the DT-R08C will begin to flash. Press and hold the corresponding key on the DT-R08C for two seconds. The indicator will remain solid.
5. Repeat step 4 for any function you wish the DT-R08C to learn.
6. When you are finished teaching the DT-R08C, press the **'Mute'** and **'VOL-'** buttons. The indicator light will extinguish and programming will be saved.

Note: During the learning process, if no key is pressed within 25 seconds on the DT-R08C, the learning process will exit without saving.

Reset to Default Setting

1. Press and hold the '**Power**' and '**Mute**' buttons until the LED indicator illuminates.
2. Press the '**Mute**' button once. The LED light will flash four times then extinguish. The remote is now reset.

Turning off the Backlight

1. Press and hold the '**Mute**' and '**CH-**' buttons until the LED indicator flashes three times. The Backlight will extinguish.
2. Repeat step one to re-enable the backlight.