



IMPORTANT NOTICE:

Inserting batteries incorrectly will cause product failure. Positive (+) terminal of battery should be facing battery cover when loading batteries in remote. Improper battery installation is not covered by warranty.



SM.1490436BE000

Pure Control (PC100) Quick Setup Guide

Confirm first

- Your PC100 remote control has two fresh AAA batteries properly installed.
- To use the learning mode, you will need another remote that currently works with your TV. Ensure that it has working batteries.
- In its default setting, the PC100 can control RCA Healthcare television.

Automatic Search

The automatic search function will cycle your remote through common TV remote codes. This is the easiest method of programming your remote, however; it will not work with all TVs.

1. Ensure that your TV is powered on.
2. Press and hold the **'Power'** and **'OK'** buttons for seven seconds. The indicator light next to the **'Power'** button will turn on. Release both buttons.
3. If your TV powers off, immediately press the **'Mute'** button. The remote will save the proper code.

Quick Search

The fast search function will search through common TV remote codes incrementally as you press the **'CH+'** button. This method of programming your remote will not work with all TVs.

1. Ensure that your TV is powered on.
2. Press and hold the **'Mute'** and **'CH+'** buttons for five seconds. The indicator light next to the **'Power'** button will turn on. Release both buttons.
3. Press the **'CH+'** button. Each time you press it, it will cycle to the next TV remote code.
4. If you press **'CH+'** for longer than one second, the remote will begin to cycle automatically.
5. When the channel on your TV changes, press **'CH+'** or **'CH-'** to increment or decrement the code. When you reach the correct code, press the **'Mute'** button to save it.

Learning Mode

The PC100 has the ability to learn codes from other remotes.

1. Find a remote that works with your TV.
2. Press and hold the **'CH+'** and **'VOL+'** buttons for five seconds. The indicator light next to the **'Power'** button will turn on. Release both buttons.
3. Point the front of the PC100 at the front of your teaching remote. Keep both remotes within 2-3 inches of each other.
4. Press a function key on the teaching remote. The indicator light on the PC100 will flash. Press and hold the corresponding key on the PC100 for two seconds. The indicator light will flash three times, then remain lit.
5. Repeat step 4 for any function you wish the PC100 to learn.
6. When you are finished, press and hold the **'CH+'** and **'VOL-'**. The indicator light will go dark and the codes will be saved.

Note: During the learning process, if no key is pressed within 25 seconds, the learning process will exit without saving.

Manual Setup

1. Press and hold the **'Power'** and **'Mute'** buttons for five seconds. The indicator light next to the **'Power'** button will turn on. Release both buttons.
2. Input the four digit code for your brand of TV (listed below). If the code is valid, the indicator light will go dark. If the code is invalid, the indicator light will flash four times, and the manual setup will exit.
3. Test the PC100 with your TV. If it doesn't work, repeat the process with another code.

Reset to Default Setting

1. Press and hold the **'Power'** and **'Mute'** buttons for three seconds. The indicator light next to the **'Power'** button will turn on. Release both buttons.
2. Press the **'Mute'** button. The remote will be reset.

Remote Code List

Quick List

Quick List		Brand	Code
RCA LED Bed 1	1362	ACTION	1019
RCA LED Bed 2	1363	ADMIRAL	1048 1298 1299 1008 1015 1027 1072 1259 1346
RCA LED Bed 3	1364	ADVENT	1257 1278 1002 1034
RCA Bed 1	1007	AIKO	1165 1032
RCA Bed 2	1356	AIWA	1019 1024
RCA Bed 3	1357	AKAI	1204 1216 1217 1255 1301 1010
RCA ONCORP Bed 1	1333	AKIO	1076 1082 1012 1032 1033 1304
RCA ONCORP Bed 2	1158	AOC	1250 1251 1252 1253 1254 1301 1306
LG Bed 1	1358	APEX DIGITAL	1120 1269
LG Bed 2	1359	AUDIOVOX	1019 1020 1032 1033 1120
LG Bed 3	1360	BELCOR	1301
LG Bed 4	1361	Bloomingdale	1459
PHILIPS	1001 1016	BELL & HOWELL	1021 1299
Zenith	1015	BRADFORD	1019
RCA	1017	BROCKWOOD	1301
PANASONIC	1014	BROKSONIC	1019 1026 1027 1028 1029 1031 1033 1043 1067 1071 1074 1259 1299 1302 1308 1164
Sony	1002	CANDLE	1301 1076
Toshiba	1003	CELEBRITY	1002
VIZIO	1189	CELERA	1267 1269 1003
Sharp	1004	CHANGHONG	1003
Samsung	1010	CITIZEN	1304 1032 1114 1259 1299 1301 1303
RCA COM. R230D1	1477 1478 1479 1480 1481	CLAIRTONE	1306
RCA COM. R230D2	1022 1473 1474 1475 1476	COMCAST	1368
		CONCERTO	1301
		CONTEC	1019 1306
		CRAIG	1019
		CROSLEY	1034
		CROWN	1085 1107 1167 1002 1019 1114 1302
		CURTIS MATHES	1220 1008 1009 1010 1021 1033 1034 1072 1114 1299 1301 1304 1344 1355
		CXC	1019
		DAEWOO	1033 1032 1114 1120 1218 1301 1019 1002
		DAYTRON	1114 1301
		DENON	1009
		DISHNETWORK	1369
		DIRECTV RC50	1366
		DIRECTV RC70H	1367
		DUMONT	1087 1098 1015 1301
		DURABRAND	1020 1081 1113 1141 1348
		DYNEX	1260 1261 1279 1278
		ELECTROBAND	1002 1306
		ELECTROHOME	1114



Remote Code List (Continued)

ELEMENT	1281 1282 1283 1284	MEI	1306
EMERSON	1013 1026 1062 1087 1199 1014 1019 1020 1021 1023 1027 1033 1038 1114 1198 1259 1298 1301 1303 1306 1341 1343	MEMOREX	1182 1188 1270 1014 1021 1259 1298 1299 1301 1304
ENVISION	1250 1251 1252 1253 1254	MGA	1301
FISHER	1021 1317 1060 1075 1077 1106 1112 1113 1180	MIDLAND	1008 1015 1114 1317 1355
FUJITSU	1314 1320 1317	MIDSOUTH TV 1/TV 2/TV 3	1460 1461 1462
FUNAI	1012 1013 1019 1067 1198 1199 1298	MILLROCK	1194
FUTURETECH	1019	MITSUBISHI	1006 1046 1065 1082 1287 1301 1059 1072
GE	1007 1008 1010 1088 1120 1015 1017 1018 1031 1033 1043 1072 1081 1301 1305 1317 1347 1355	MITSUI	1023 1002 1019 1020 1038 1142 1218 1341 1343
GFM	1013 1198 1199	MOTOROLA	1072 1305
GIBRALTER	1015 1301	MTC	1019 1114 1300 1301 1304 1306
GOLDSTAR	1044 1097 1183 1114 1301 1028	MULTITECH	1019
GRUNDY	1019 1298	NAD	1003 1301 1344
HAIER	1348 1219 1221 1267 1268 1269 1270 1271 1272 1289	NEC	1321 1095 1301 1305 1259 1340
HALLMARK	1301	NEK	1003 1015 1021 1032 1301
HARVARD	1019	NOBLEX	1021 1066 1068 1084 1085 1093 1117 1158 1163 1164 1171 1173 1175 1177
HCI	1196 1197	NOSHI	1316
HITACHI	1009 1025 1089 1021 1234 1266 1083 1111 1114 1001 1172 1299 1301 1309 1310	NTC	1032
HISENSE	1126 1130 1141 1154 1157 1169 1290	OLEVIA (LCD)	1327 1202
HP	1249	OLIVIA	1200 1201 1202 1203 1327
HYUNDAI	1020 1021 1108 1148 1289	ONWA	1019
ILO	1233 1349 1352	OPTIMUS	1014 1021 1344
INFINITY	1034	OPTONICA	1072 1340 1346
INSIGNIA	1255 1256 1257 1258 1259 1260 1261 1277 1278 1279 1280	ORION	1278 1026 1259 1298
INTEQ	1015	PANASONIC	1014 1069 1021 1023 1030 1031 1072 1229 1230 (ID) 1301 1304 1305 1340 1346
JBL	1034	PDI	1183 1184 1185 1186
JCB	1002	PHILCO	1019 1020 1025 1032 1033 1002 1009 1034 1038 1045 1052 1072 1076 1114 1259 1301 1305 1306 1317 1074 1086 1341 1343
JC PENNEY	1003 1008 1114 1301 1304 1316 1317 1347 1355	PHILIPS	1001 1005 1016 1339 1034 1012 1047 1050 1051 1345 1053 1057 1066 1067 1184 1187 1213 1214 1215 1222 1252 1325
JVC	1031 1259 1005	PILOT	1114 1301
KEC	1019	PIONEER	1010 1301 1309 1344
KENWOOD	1002 1301	POLAROID	1188 1189 1205 1206 1207 1208 1209 1210 1211 1330
KOLIN	1200 1201 1202 1203	POLOROID	1255 1258 1259 1278 1353
KONKA	1038 1062 1086 1218 1255 1258 1350	PORTLAND	1002 1032 1033 1114 1301
KTV	1002 1019 1032 1114 1298 1302 1303 1306	PRIMA	1002 1048 1260
LG	1022 1011 1044 1301 1183 1001 1358 (BED1) 1359 (BED2) 1360 (BED3) 1361 (BED4) 1299 1015	PRISM	1034
LOGIK	1148 1153 1155 1299	PROSCAN	1008 1031 1248 1301 1355
LUXMAN	1301	PROTON	1301
LXI	1003 1008 1015 1021 1034 1072 1301 1355	PROVIEW	1281 1282 1283 1284
MAGNAVOX	1034 1076 1114 1298 1301 1306 1317 1325	PULSAR	1015 1301
MAJESTIC	1034 1301		



Remote Code List (Continued)

QUASAR	1014 1031 1305 1340 1346	TOSHIBA	1003 1039 1049 1072 1174 1232 1288 1304 1321 1021
RADIO SHACK	1002 1008 1019 1021 1114 1301 1340 1346 1355	TRUTECH	1191 1192 1193
RCA	1007 1008 1017 1018 1115 1120 1297 1301 1305 1309 1316 1317 1010 1033 1072 1090 1344 1355 1356 1357	VICTOR	1005
RCA HE/CE/CE - TV1/TV2/TV3	1362 (BED 1) / 1363 (BED 2)/ 1364 (BED 3)	VIDTECH	1301
REALISTIC	1019 1021 1114 1301 1340 1346	VIEWSONIC	1195 1262 1263 1264 1265 1266 1251 1273 1274 1275 1276
RHAPSODY	1306	VIORE (LCD)	1145
ROOMCOX	1354	VIZIO	1187 1189 1190
RUNCO	1351	WARDS	1003 1034 1298 1299 1301 1317 1340 1344 1346 1347
SAMPO	1114 1301	WESTINGHOUSE	1002 1223 1224 1225 1226 1227 1228
SAMSUNG	1010 1088 1042 1066 1068 1074 1078 1114 1301 1304 1312 1315 1002	WHITE WEST-INGHOUSE	1033 1259 1298
SANSUI	1090 1122 1123 1137 1259 1278 1291	YAMAHA	1301 1318
SANYO	1021 1060 1075 1077 1106 1112 1113 1180 1285 1286 1319 1019 1317	ZENITH	1015 1252 1032 1076 1259 1299 1301
SCOTT	1019 1026 1114 1298 1301	ZONDA	1028 1033 1057 1072 1081 1114 1289 1301 1303 1304 1340 1342
SHARP	1004 1040 1072 1095 1114 1160 1161 1287 1298 1301 1340 1346		
SHOGUN	1019 1298 1301 1304		
SIGNATURE (2000)	1027 1072 1299 1301		
SIMPSON	1317		
SONY	1002 1311 1212		
SOYO	1235 1236 1237 1238 1239 1240 1241 1242 1243 1244 1245 1246 1247		
SQUAREVIEW	1012		
SSS	1019 1301		
STARLITE	1019		
SUPERSONIC	1019 1285		
SYLVANIA	1198 1199 1012 1013 1034 1114 1301 1306 1317		
SYMPHONIC	1198 1199 1012 1013 1019		
SYNTAX	1200 1201 1202 1203		
TANDY	1072		
TATUNG	1305		
TECHNICOLOR	1370 1371 1372		
TECHNICS	1014 1015 1031		
TECHWOOD	1032 1298 1301		
TEKNIKA	1019 1032 1034 1114 1298 1299 1301 1304		
TMK	1027 1301		